
INSTRUCTION MANUAL

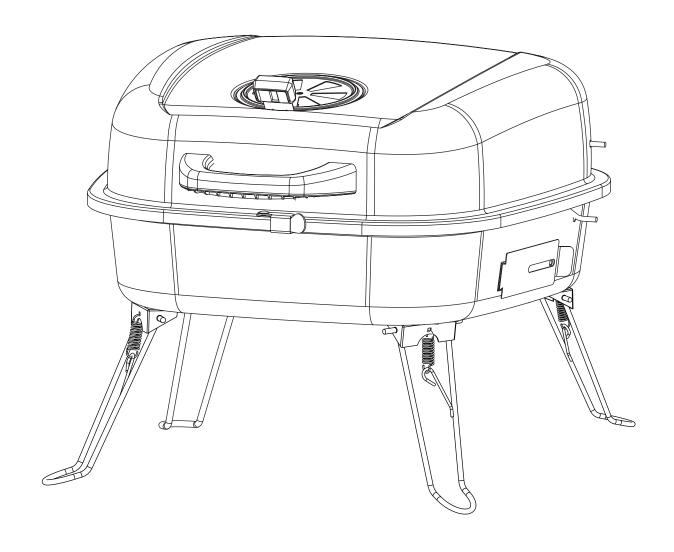


Exploded View and Hardware List

Exploded View 1.Handle 2. Lid **(2**) (11) 3. Air Damper 4. Hinge Top(2) 5. Hinge Bottom(2) 6. Bottom Bowl 7. Air-Vent(2) (10) 8. Leg Assem(4) 9. Charcoal Grid 10. Cooking Grid 11. Warming Grid Hardware ∅5.3 65Mn Ε Α 4 2PCS Truss Head Screw Small Lock Washers 6PCS M5X12 Ø 6.4 Round Heat -F В 11PCS Truss Head Screw **Resistant Washers** 2PCS C G M4 Small Wing Nuts 2PCS 2PCS Н D 65Mn Cotter Pins 2PCS M5 Large Wing Nuts 13PCS

Assembly Instructions:


Step 1

Attach handle to lid (F heat resistant washer 2pcs / D Large wing nut 2pcs). Attach air vent to lid (B Screw 1pc / D Large wing nut 1pc). Attach top hinge to lid (B Screw 2pcs / E Small lock washer 2pcs / D Large wing nut 2pcs).

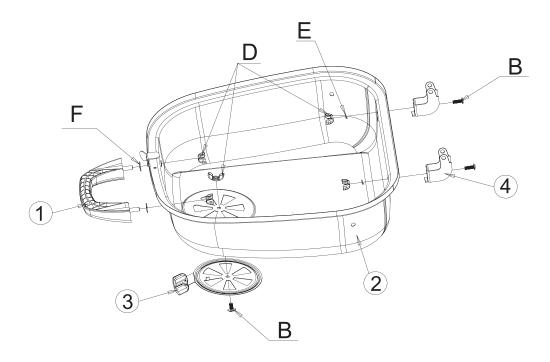


Step 2

Attach bottom hinge to bottom bowl (B Screw 4pcs / E Small lock washer 4pcs / D Large wing nut 4pcs). Attach air damper to bottom bowl (A Screw 2pcs / C Small wing nut 2pcs).

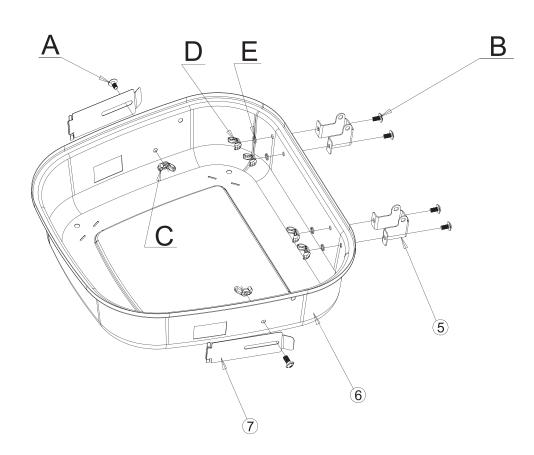


Step 3

Attach leg assembly to bottom bowl (B Screw 4pcs / D Large wing nut 4pcs).

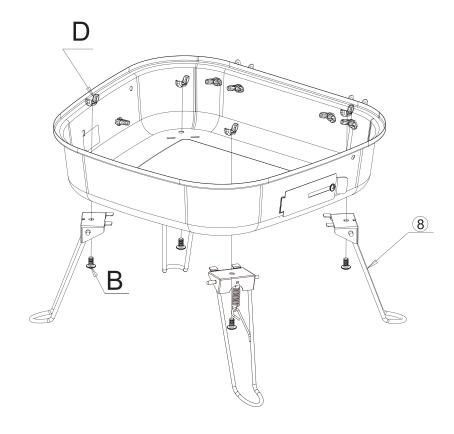

Step 4


Insert top hinge into bottom hinge and secure them together (G Pin 2pcs / H Cotter pin 2pcs) Note: If top hinge does not fit into bottom hinge, gently squeeze top hinge tabs together.

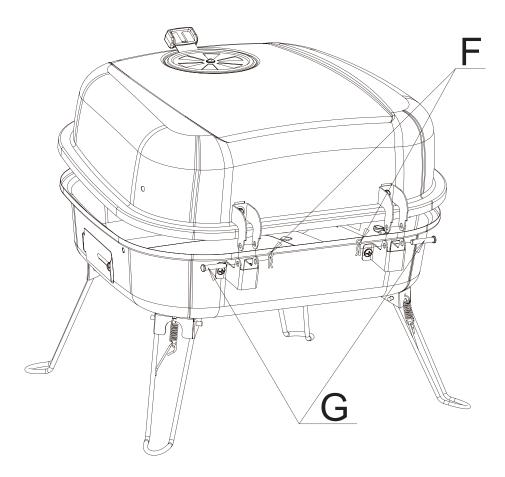

Cut zip tie on warming rack.

Slide warming rack into holes in lid and bottom bowl.

Note: Look for corresponding holes on side of lid. Insert short wire ends into lid holes, one side at a time. Position warming rack legs into slots on bottom bowl sides. Meanwhile, the warming rack support should be under the horizontal of warming rack, or else, the warming rack will slide left or right.

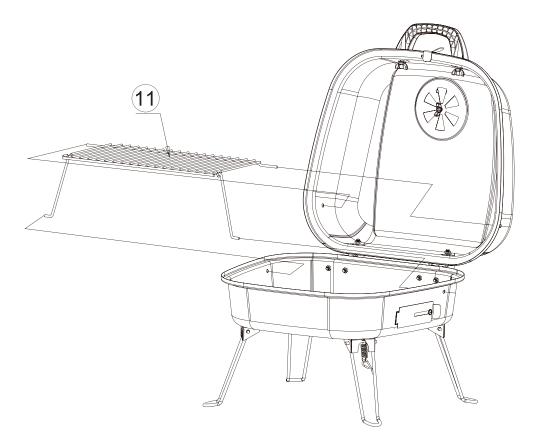

Step 6

Insert charcoal grid into bottom bowl. Insert cooking grid into bottom bowl.

