

# ASSEMBLY INSTRUCTION


ITEM NO.: MB-162876

## IMPORTANT NOTE:

**\*\*PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.**


**\*\*BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.**

**\*\*DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP.**

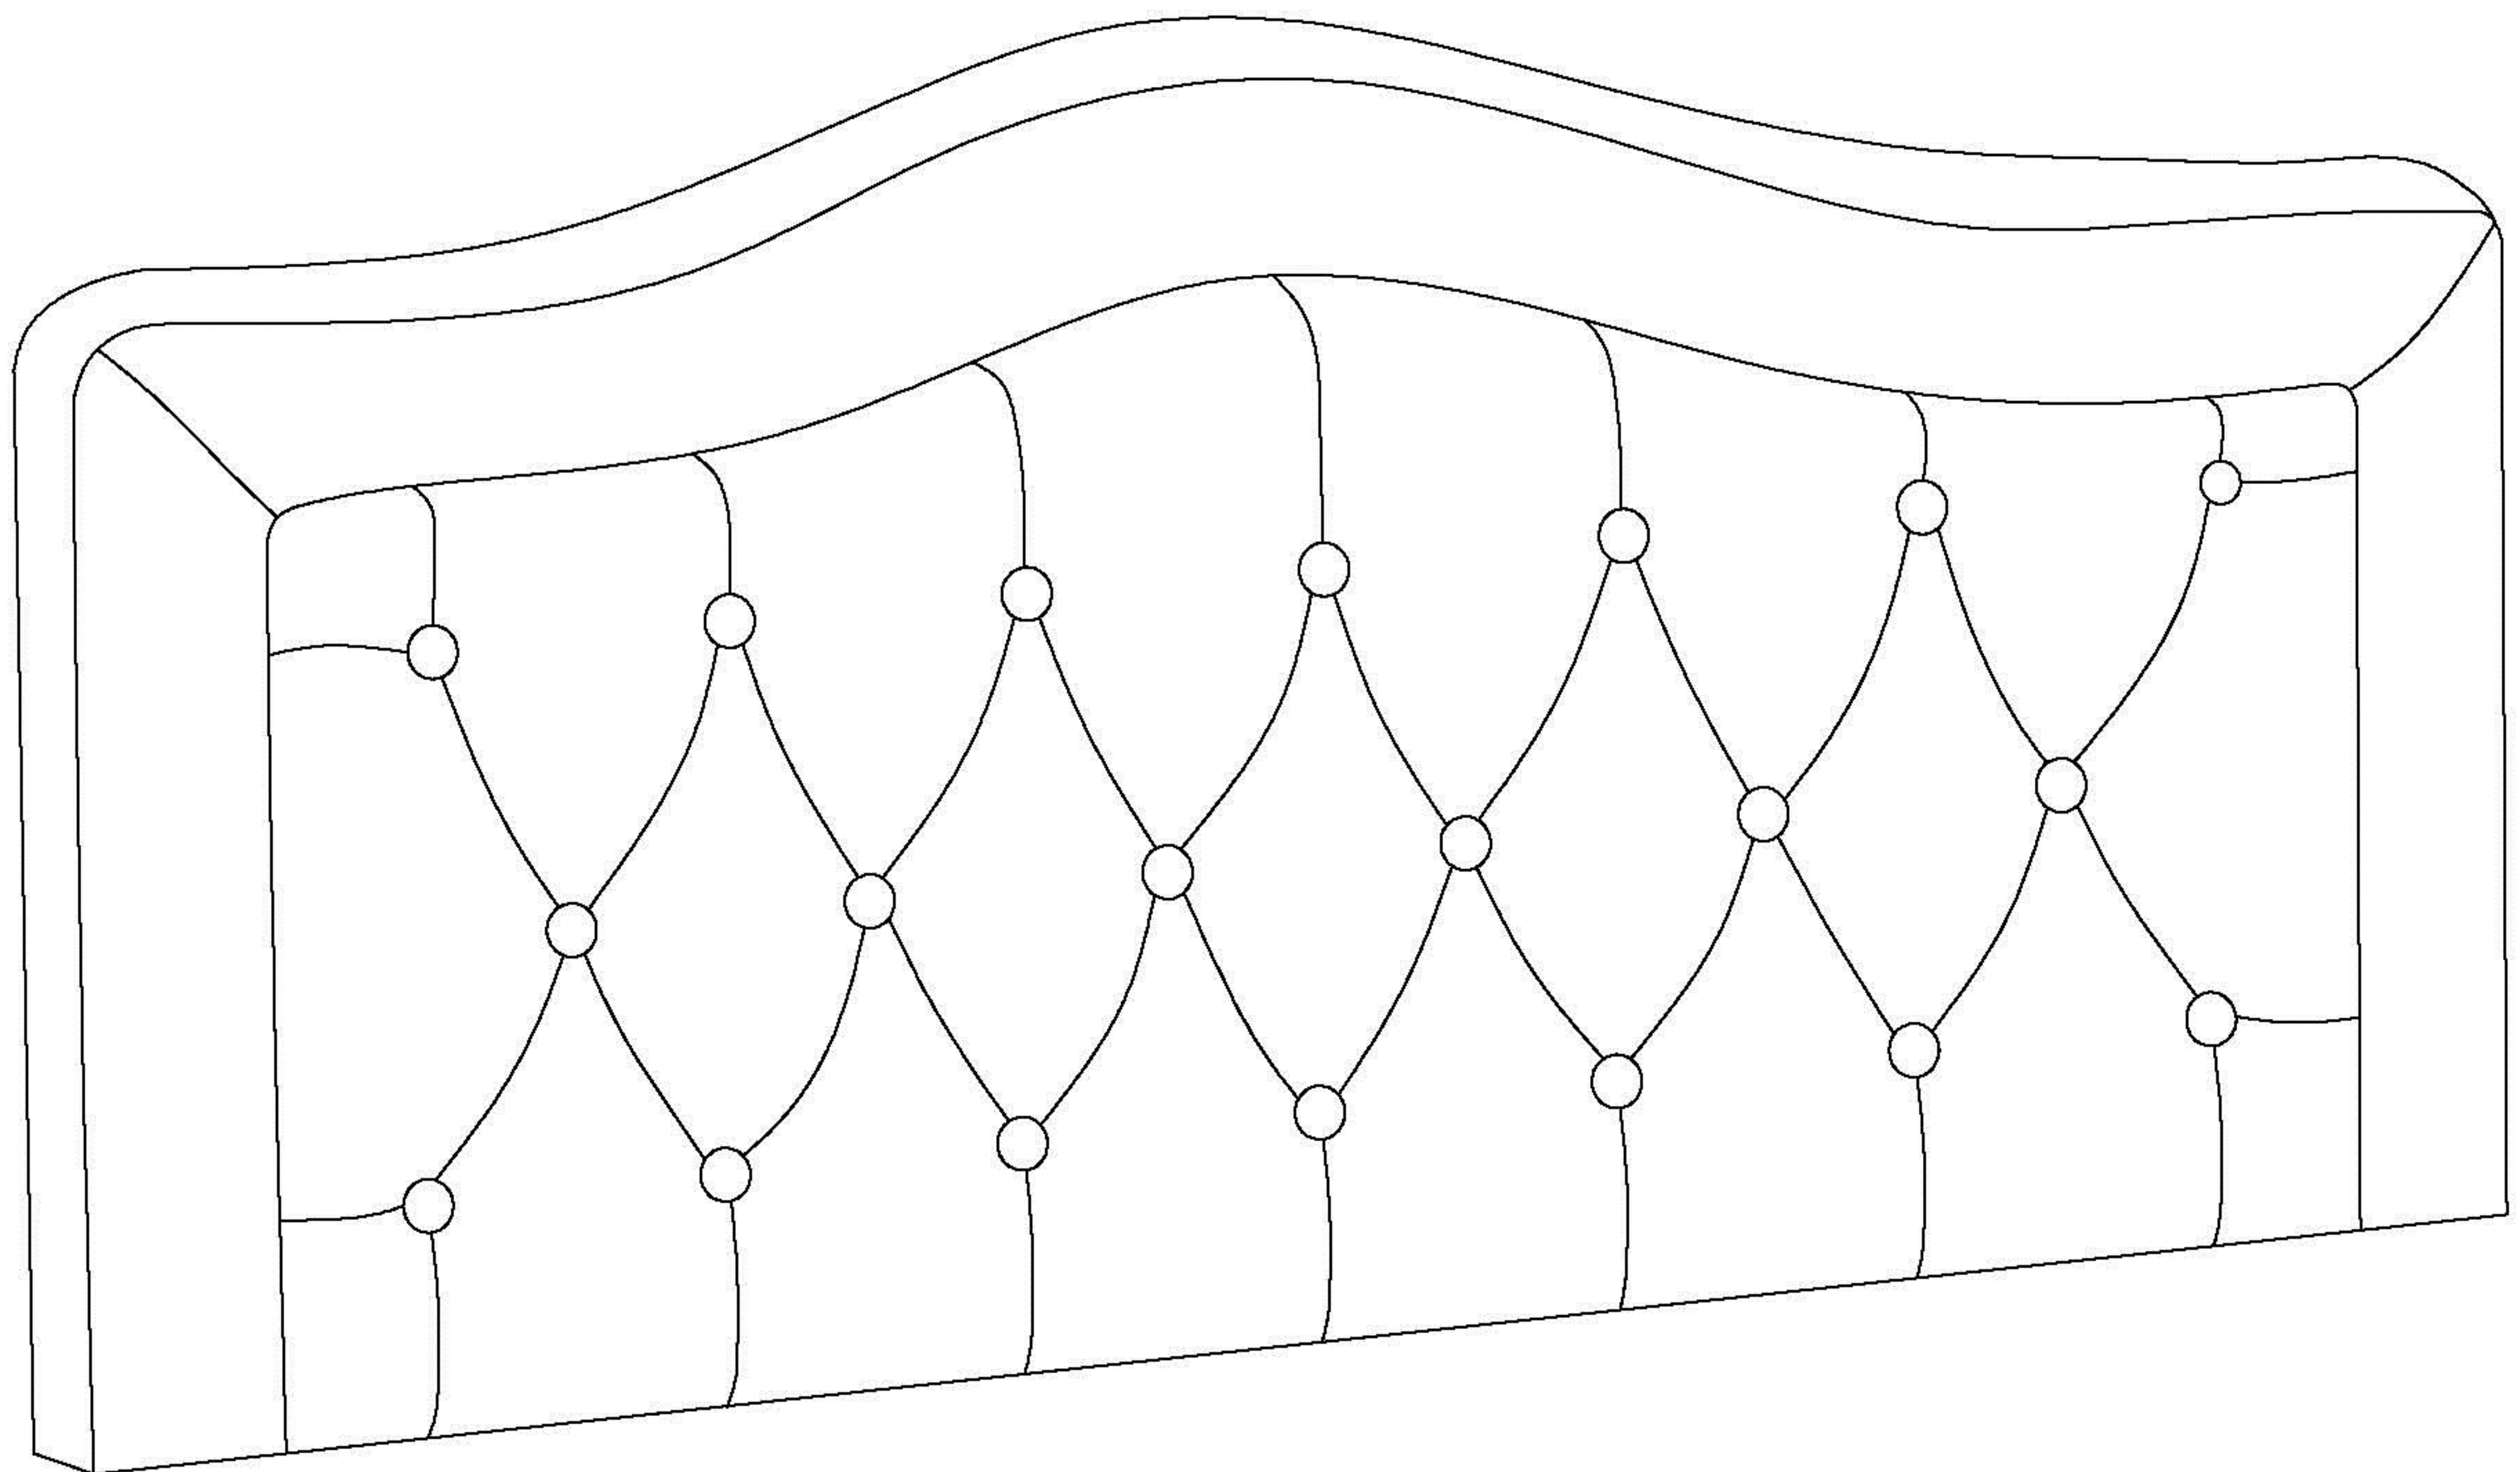




# PARTS AND HARDWARE

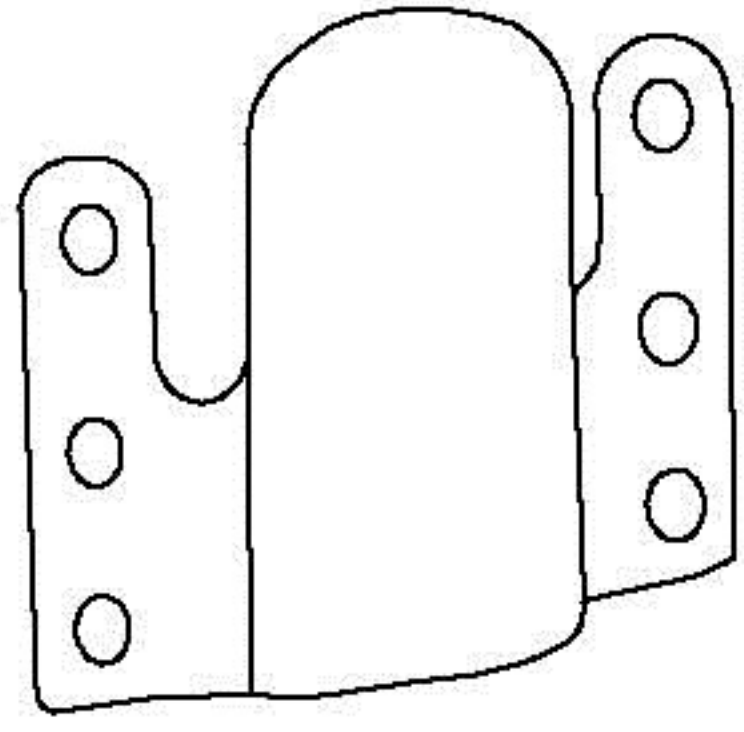


**A: HOOK 2PC**



**B: PLASTIC EXPANSION RIVETS 12PCS**

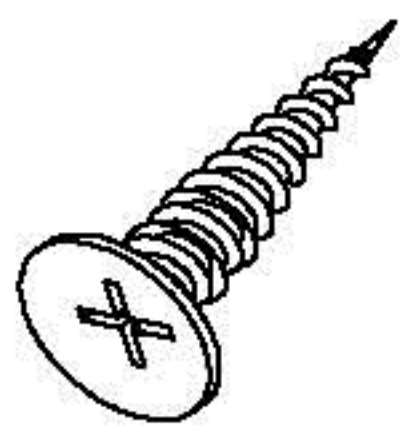


**C: SCREW 12PCS**

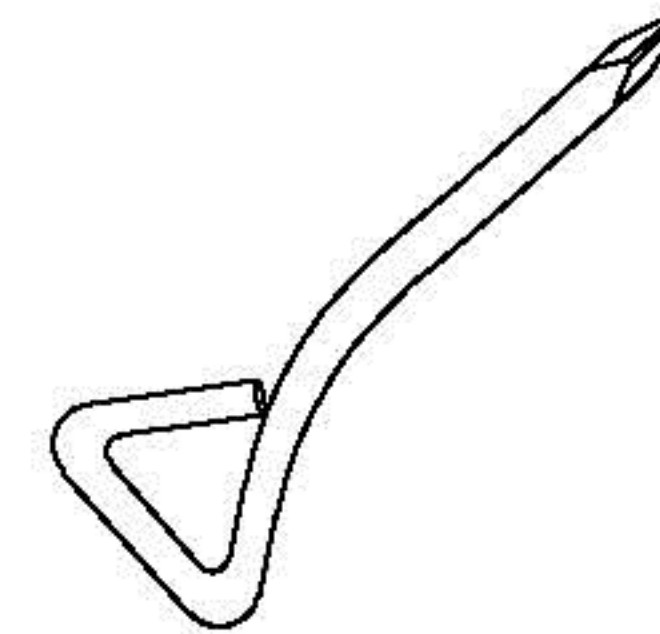


**D: SCREWDRIVER 1PC**


**1**

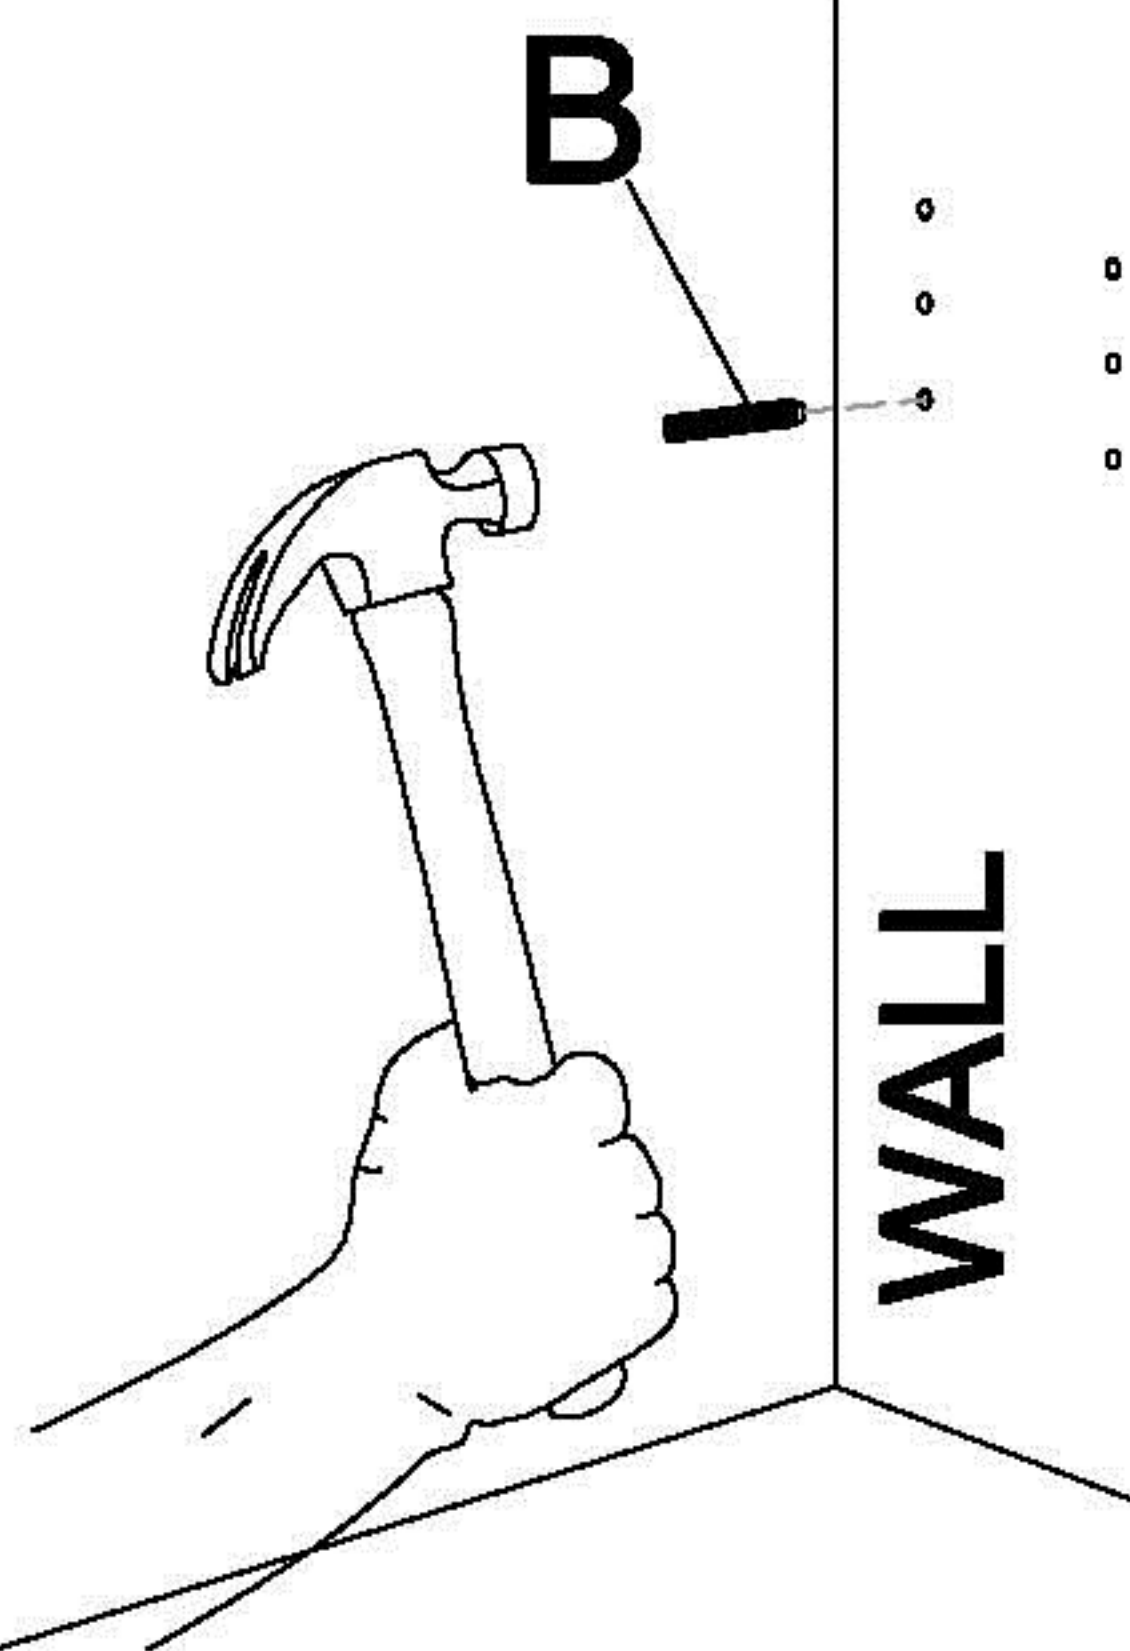

**2**

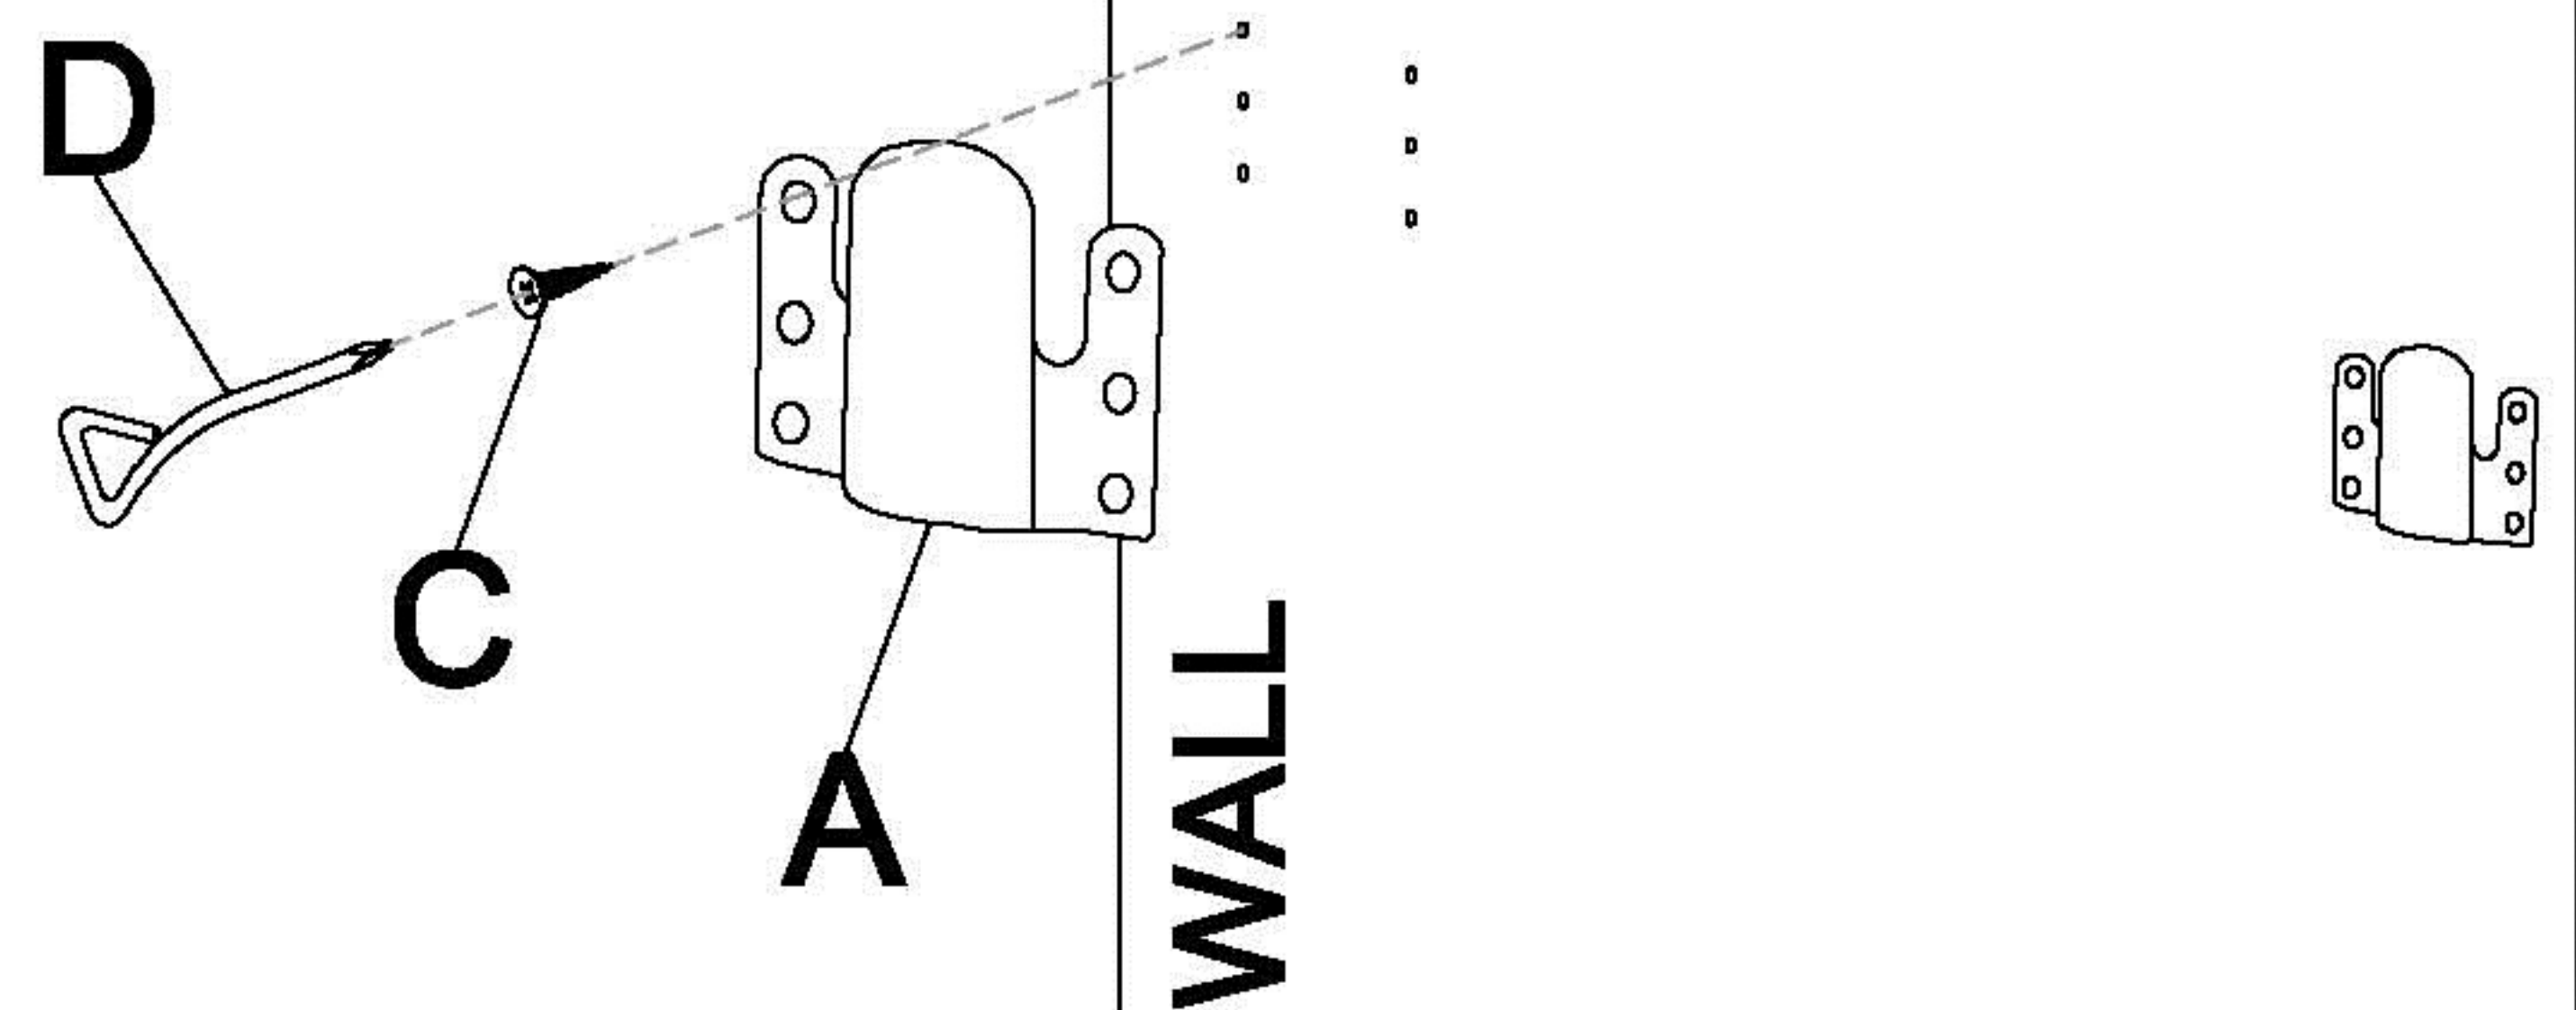

**3**

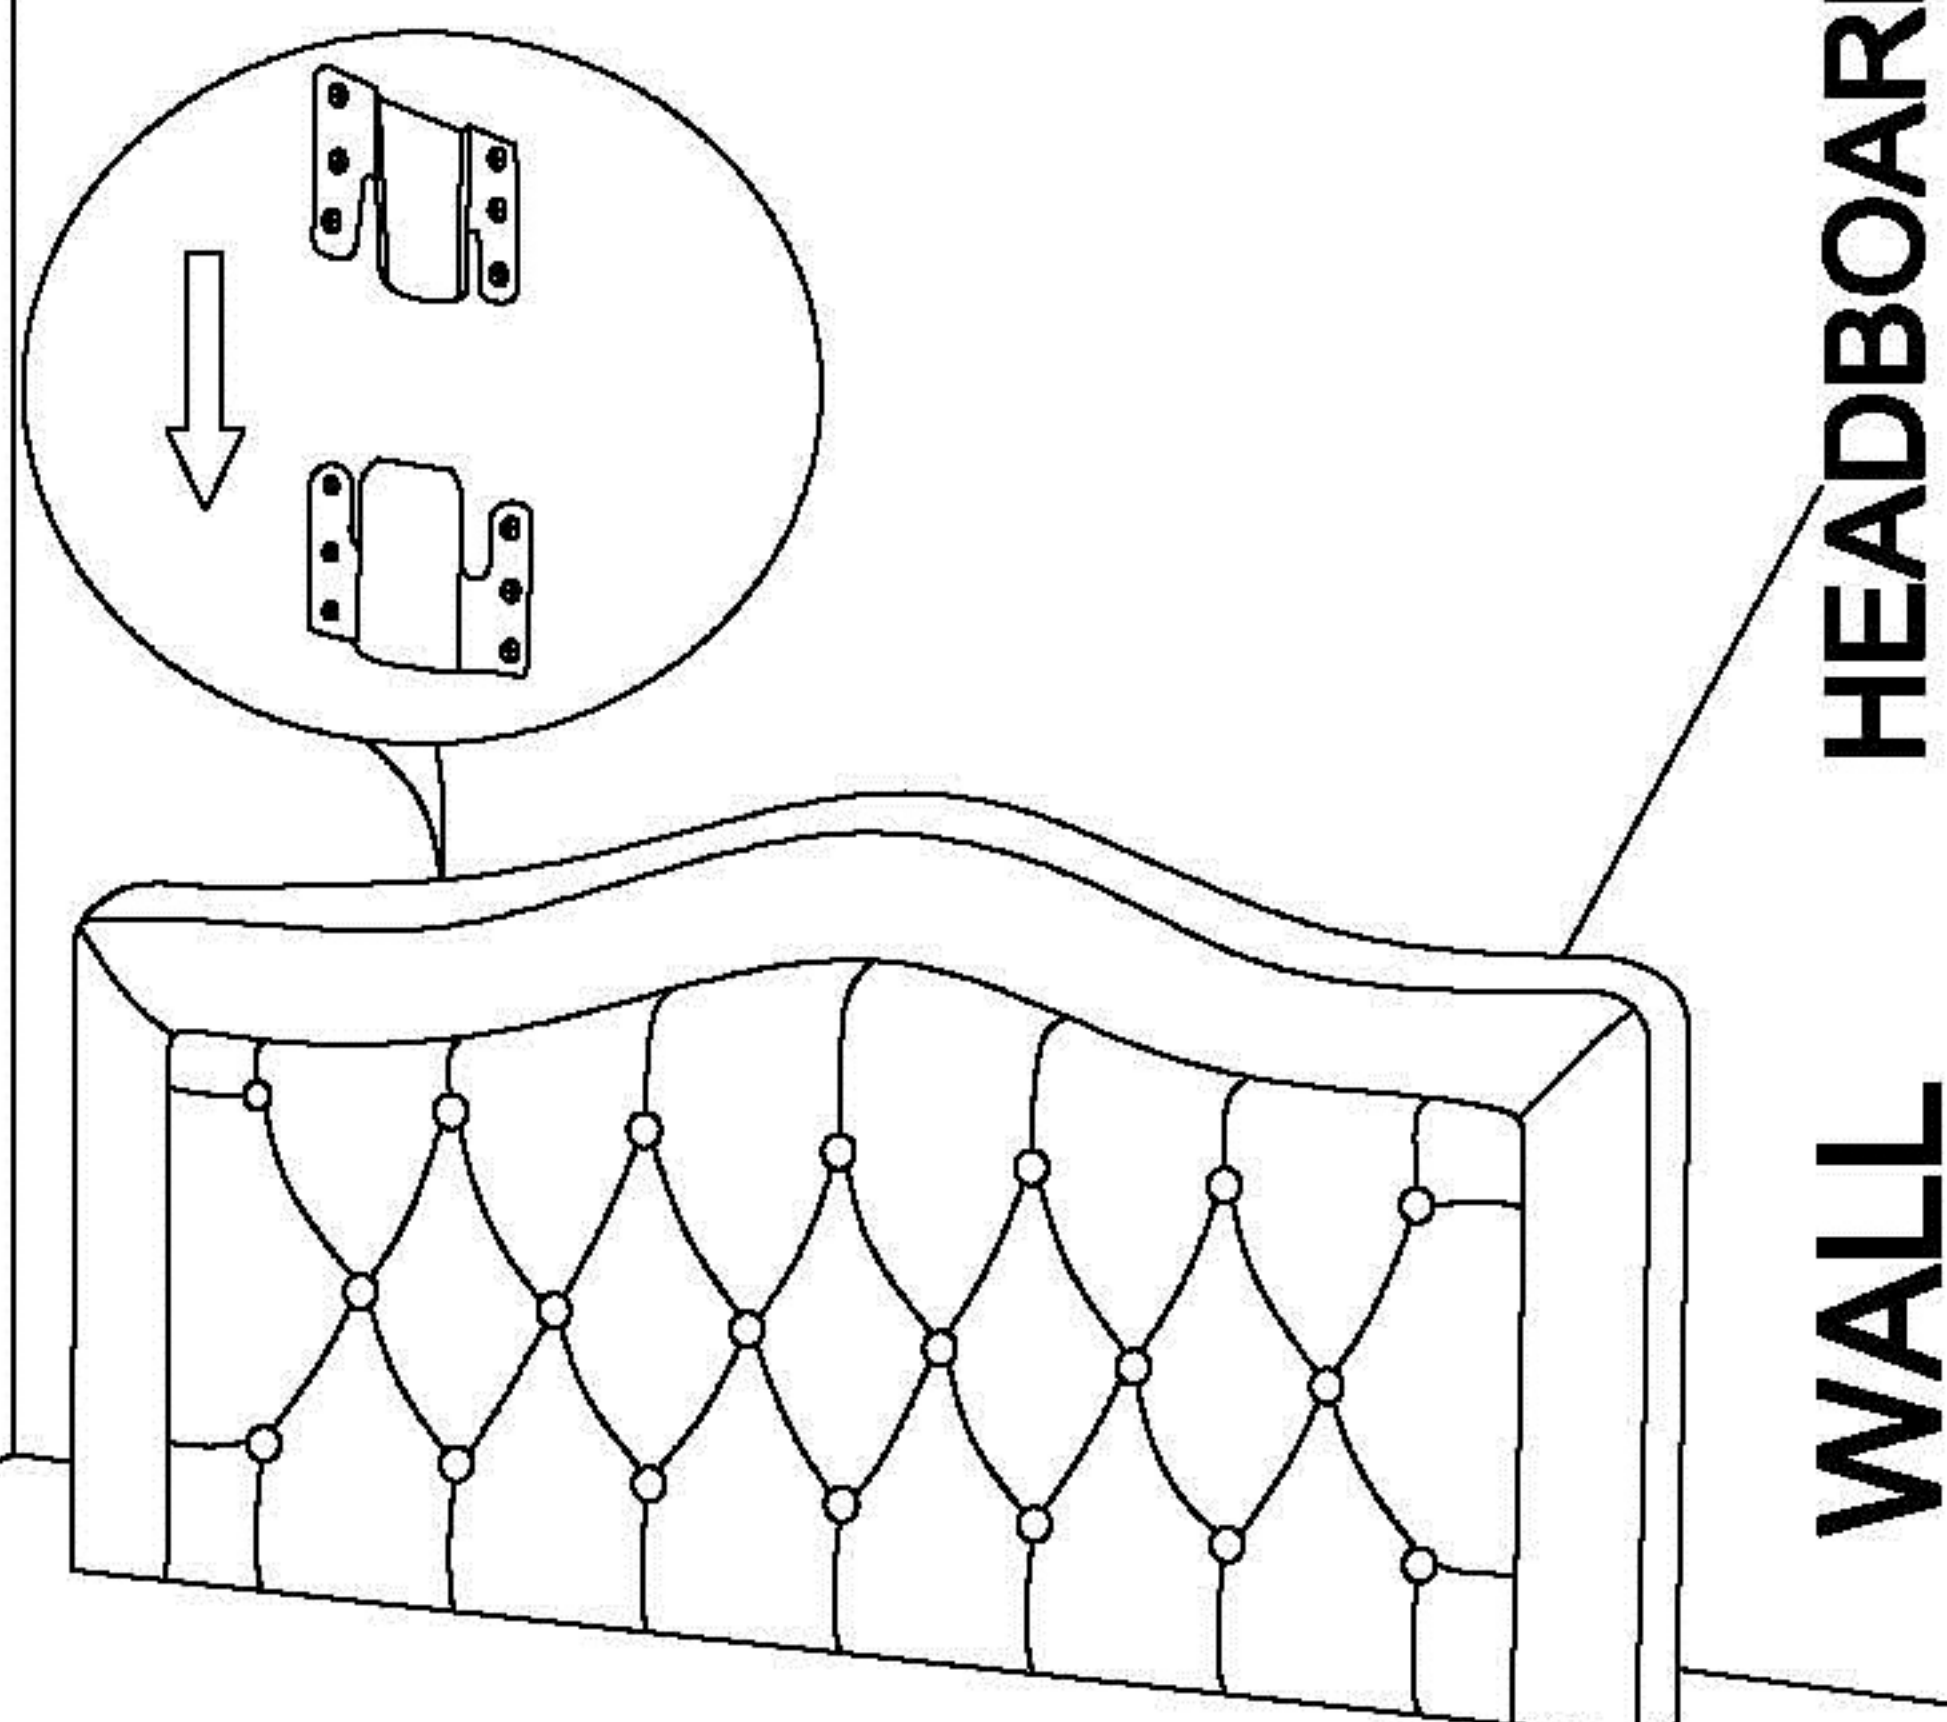

**4**

