
ASSEMBLY INSTRUCTIONS

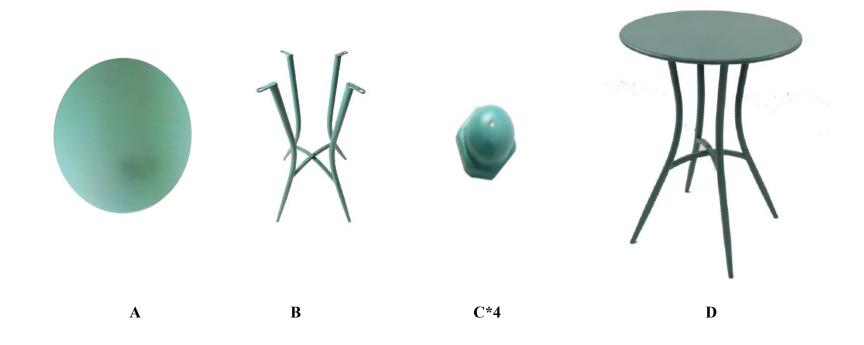

STEP1:PUT PART A ON THE TOP OF PART B,SCREW TIGHTEN WITH PART C*4
STEP2:THE PART D IS THE WHOLE ITEM.