

TIP STRAP FITTING INSTRUCTIONS

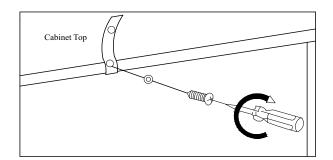


STEP: 2 Make a mark on the wall through the strap.

STEP: 3

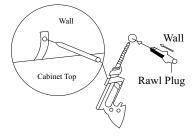


Drill a hole in the wall and insert the rawl plug.

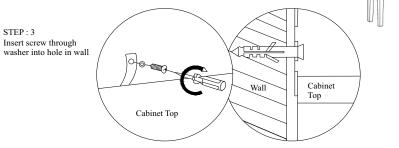

NOTE: Wall Fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work) You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

The strap and screw which to fix the strap on to the furniture are provided only.

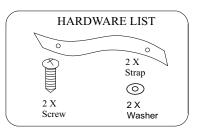

PAGE 4/4

ASSEMBLY INSTRUCTIONS


DESCRIPTION:- COASTAL HIGH CABINET MB-186092

0.25 HOURS






APPROXIMATE ASSEMBLY TIME

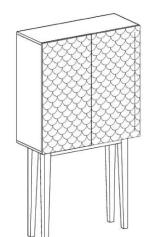


HARDWARE REQUIRED ASSEMBLY TOOLS H2) 4 Pieces (H2) 4 Pieces

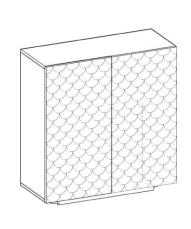





CARCASE:-1 PIECES


PAGE 1/4

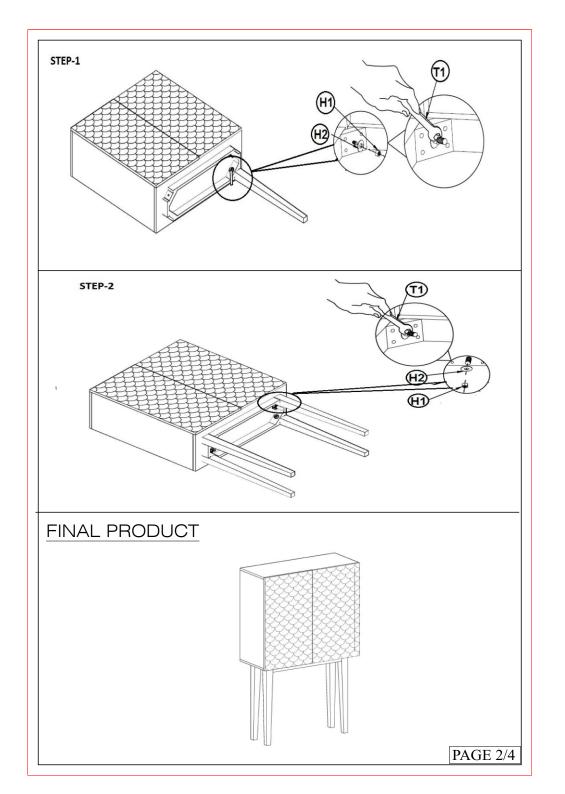

Care & Maintenance







- Do not place furniture near heating or cooling vents.
- Do not write on furniture without a padded barrier to protect the surface.
- Do not place furniture outside. For indoor use only.
 - Dust and pick-up spills using a clean, non-colored, lint-free cloth.
- Stains may be removed with mild soap solution and damp cloth.

PAGE 3/4